
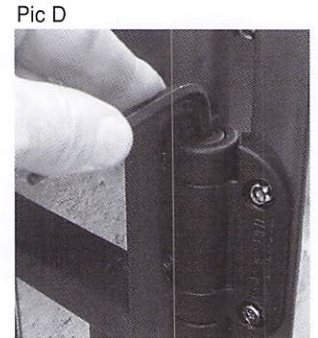


INSTALLATION INSTRUCTIONS

ADJUSTABLE TENSION SELF-CLOSING GATE HINGES


Before installing a pool gate, check with your local Council regarding specific pool fence requirements.

**NOTE:
FOR POOL
GATES
ONLY**
hinges must
be spaced
minimum
900mm from
top to top

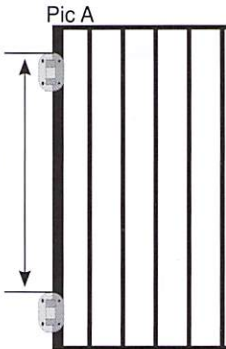

Adjustment diagrams

INCREASE TENSION

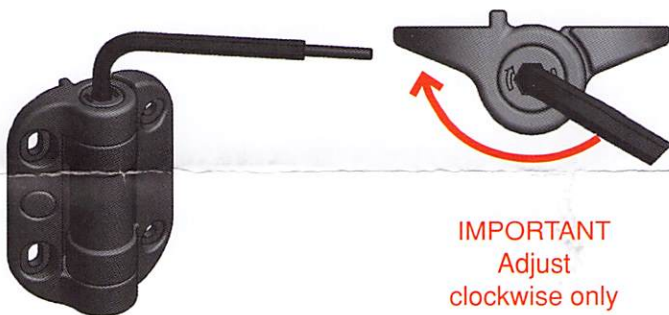


IMPORTANT
Adjust
clockwise only

RELEASE TENSION



Insert tool and
push to release

1. Mark and fix hinges to gate. Distance between top of hinges must be minimum of 900mm (Pic. A), if this isn't possible Hinge Cone (supplied) must be fitted to the bottom hinge (Pic. E).
2. Align gate with hinge post and fix hinges to post (Pic B).
3. To Adjust hinge tension, simply use supplied tool (see adjustment diagrams)
 - ONE tension click per hinge at a time
 - check for desired gate tension after each adjustment
NOTE: Gate MUST be able to self close from any open position
 - Aim for equal amounts of tension clicks on each hinge if possible
 - Maximum FOUR tension clicks per hinge
 - Once adjusted fit the supplied covers to the top of the hinges
4. Safety cone reduces the risk of children using the hinge as a foothold to climb over the gate. Must be fitted to the bottom hinge (pool hinge) if the top of the hinges are less than 900mm apart.

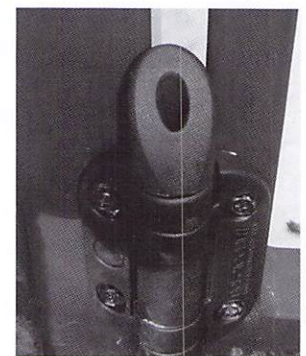

Pic E