

INSTALLATION INSTRUCTIONS

1. Drill or punch twelve (12) $\frac{1}{4}$ " holes per dimensions. Make rectangular cut-out per inside skimmer body face dimensions.
2. Place gasket on skimmer face, making sure holes in gasket align with holes in skimmer face. (A very light application of adhesive cement will assist in holding gasket in place.)
3. Align skimmer face and gasket with drilled panel holes and fasten to wall panel at center side holes with the two pan head securing screws.
4. If vinyl liner pool, install liner before proceeding with Step 5.
5. Align second gasket and face plate and fasten tightly to skimmer face with ten (10) 1" screws. Use a large Phillips head screwdriver to drive these heavy duty screws. If vinyl liner pool, pierce liner through face plate holes one at a time prior to inserting screws. Screws secure through: 1. Face Plate; 2. Gasket; 3. Liner; 4. Wall Panel; 5. Gasket; 6. Into Skimmer Face.
6. If vinyl liner pool, cut out liner along **inside** edges of face plate.

OPERATING INSTRUCTIONS

TO CLEAN SKIMMER BASKET


Remove top cover, or fold weir forward and squeeze pins toward center to remove weir. Remove and clean basket.

Deluxe Skim-Vac Accessory

SKIM-VAC attaches to vac hose and is inserted in skimmer over basket, allowing you to conveniently vacuum through the skimmer basket. SKIM-VAC revolutionizes pool vacuuming by eliminating the need for pump shutdown for cleaning pump strainer basket.

TO VACUUM WITH SKIM-VAC

1. Remove weir from front of skimmer.
2. Attach vacuum hose to vac head and handle, and fill vacuum hose with water (place over pool inlet). When full, place hose end on SKIM-VAC and place SKIM-VAC over skimmer basket.
3. Hold SKIM-VAC in place until any air in hose is evacuated by pump. Once air is removed, the pump suction will hold the SKIM-VAC firmly in place.

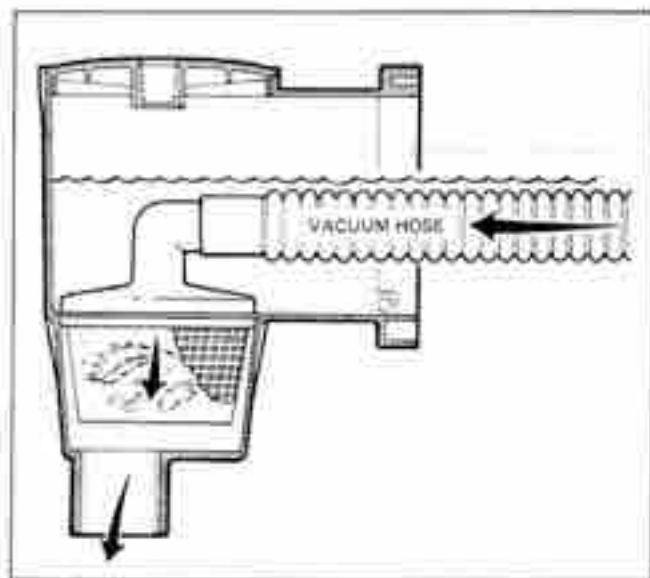

NOTE: Take care not to damage or scuff up SKIM-VAC's specially designed sealing surface.

TO ATTACH VACUUM CLEANER HOSE (without Skim-Vac)

Remove top cover, or pull weir forward and squeeze pins toward center to remove weir. Remove basket. Fill hose with water and insert vacuum hose cuff into skimmer outlet. If adapter is required; first screw adapter into skimmer outlet then press on vacuum hose.