

Installation Guide

for Canister Stop Ring (005-670-6192-02)
& MVFuse Stop Ring (005-670-6193-01)




6

Remove the ring and apply PVC primer and slow/medium set glue, such as IPS Weld-On 705, to ring and canister wall.




Place the ring into position and then quickly wipe the T-wedge on the glue dauber and fully insert it into the ring notch and ensure that the ring is level.

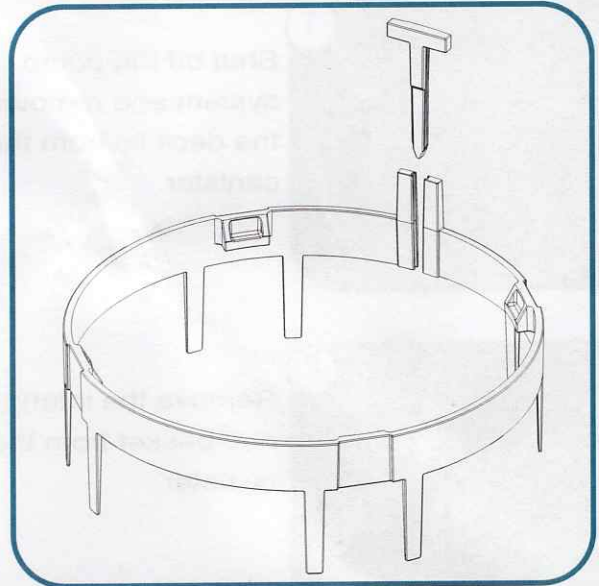

005-670-6192-02

Canister Stop Ring w/ Wedge (Gray)

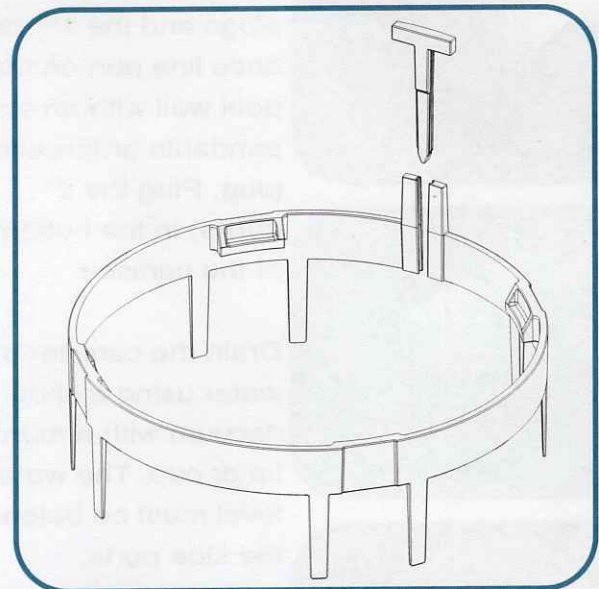

005-670-6193-01

MVFuse Stop Ring w/ Wedge (White)